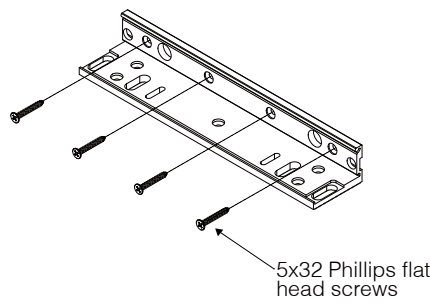
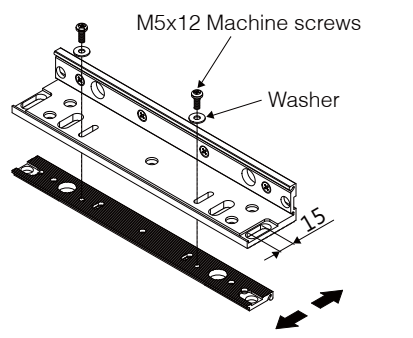
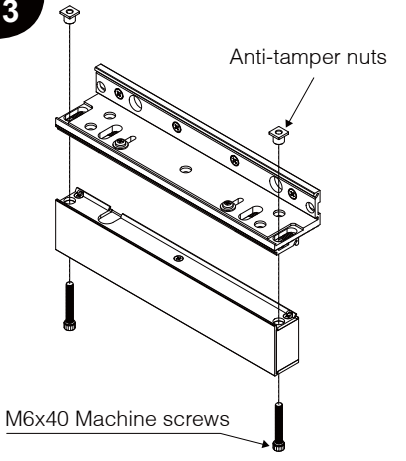


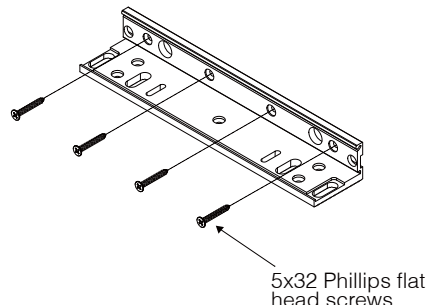
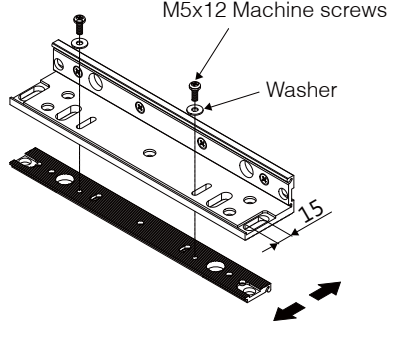
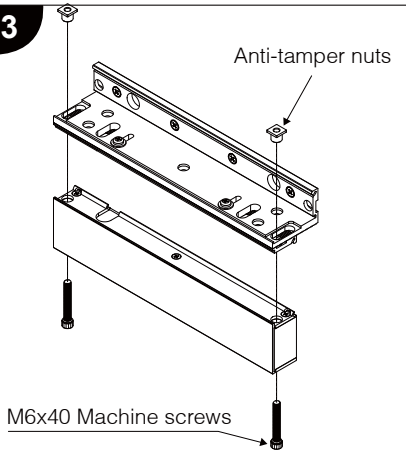
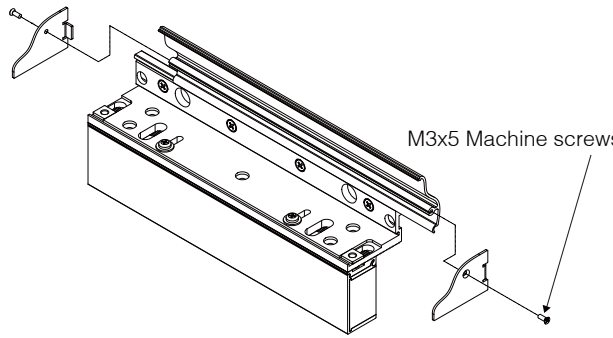
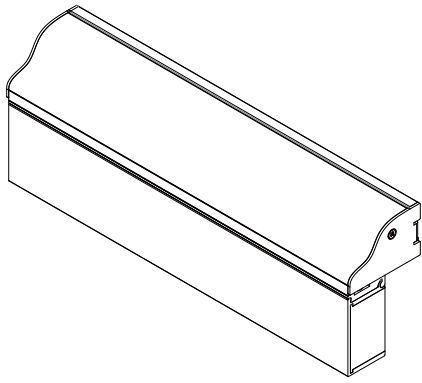
# AXM Series L Brackets Installation Instructions

## For Single Magnets – Standard

Unit: mm

|   |   |   |
|---|---|---|
| <p><b>1</b></p>  <p>5x32 Phillips flat head screws</p> <p>1. Secure the L bracket to the wall using 5 x 32 Phillips flat head screws (x4).</p> | <p><b>2</b></p>  <p>M5x12 Machine screws<br/>Washer</p> <p>15</p> <p>2. Fasten the mounting plate to the L bracket using M5 x 12 (x2) machine screws and the washers. The adjustable range is 15 mm.</p> | <p><b>3</b></p>  <p>Anti-tamper nuts</p> <p>M6x40 Machine screws</p> <p>3. Attach the magnet to the mounting plate. Place anti-tamper nuts (x2) on the L bracket and fasten using M6 x 40 machine screws (x2).</p> |
|---|---|---|

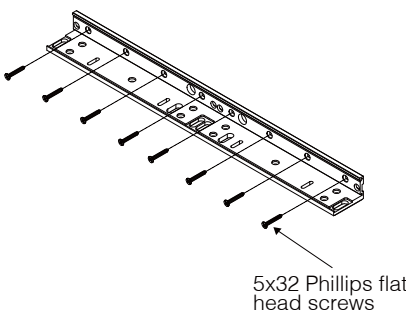
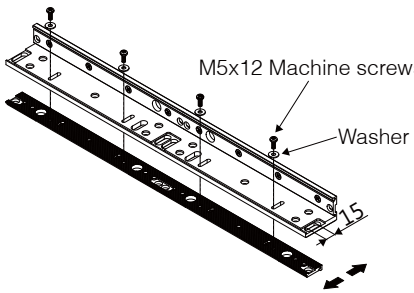
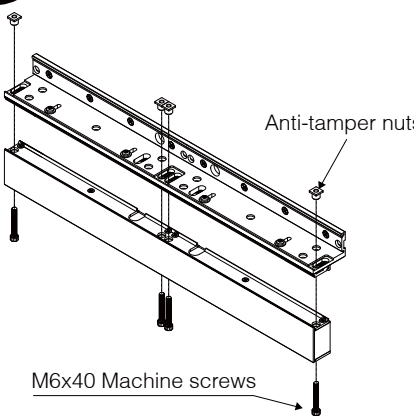
## For Single Magnets - Bracket with Cover

|  |  |  |
|--|--|--|
| <p><b>1</b></p>  <p>5x32 Phillips flat head screws</p> <p>1. Secure the L bracket to the wall using 5 x 32 Phillips flat head screws (x4).</p>             | <p><b>2</b></p>  <p>M5x12 Machine screws<br/>Washer</p> <p>15</p> <p>2. Fasten the mounting plate to the L bracket using M5 x 12 (x2) machine screws and the washers. The adjustable range is 15 mm.</p> | <p><b>3</b></p>  <p>Anti-tamper nuts</p> <p>M6x40 Machine screws</p> <p>3. Attach the magnet to the mounting plate. Place anti-tamper nuts (x2) on the L bracket and fasten using M6 x 40 machine screws (x2).</p> |
| <p><b>4</b></p>  <p>M3x5 Machine screws</p> <p>4. Slide the side cover plates on both sides of the L bracket and secure with M3x5 machine screws (x2)</p> | <p><b>5</b></p>  <p>5. Installation complete</p>   |  |

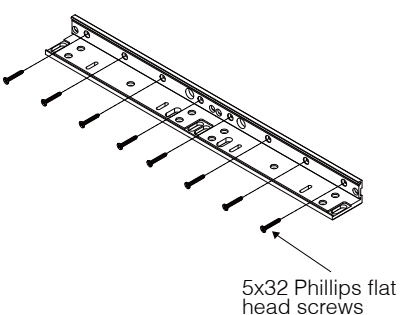
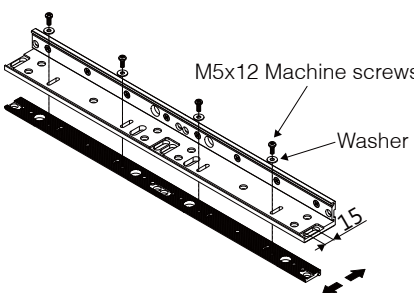
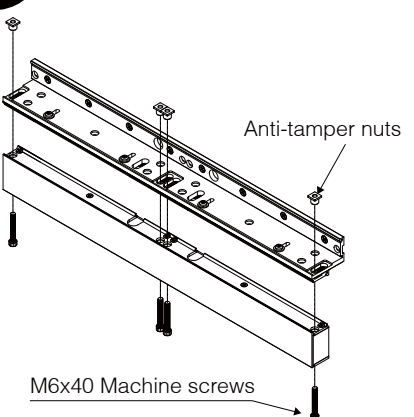
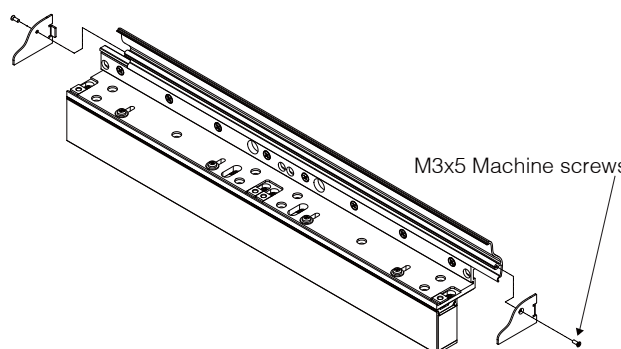
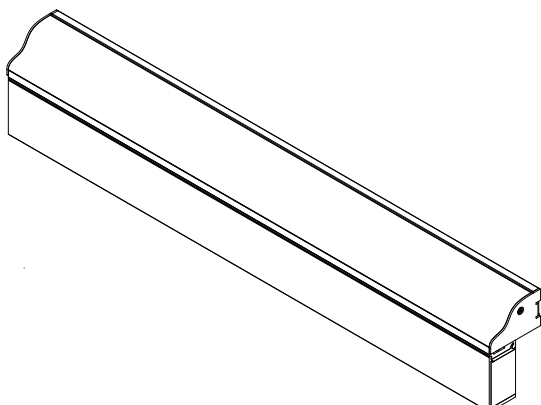
# AXM Series L Brackets Installation Instructions

## For Double Magnets- Standard

Unit: mm

|   |  |  |
|---|--|--|
| <p><b>1</b></p>  <p>5x32 Phillips flat head screws</p> <p>1. Secure the L bracket to the wall using 5 x 32 Phillips flat head screws (x8).</p> | <p><b>2</b></p>  <p>M5x12 Machine screws<br/>Washer</p> <p>15</p> <p>2. Fasten the mounting plate to the L bracket using M5 x 12 (x4) machine screws and the washers. The adjustable range is 15 mm.</p> | <p><b>3</b></p>  <p>Anti-tamper nuts<br/>M6x40 Machine screws</p> <p>3. Attach the magnet to the mounting plate. Place anti-tamper nuts (x4) on the L bracket and fasten using M6 x 40 machine screws (x4).</p> |
|---|--|--|

## For Double Magnets – Bracket with Cover

|  |   |   |
|--|---|---|
| <p><b>1</b></p>  <p>5x32 Phillips flat head screws</p> <p>1. Secure the L bracket to the wall using 5 x 32 Phillips flat head screws (x8).</p>            | <p><b>2</b></p>  <p>M5x12 Machine screws<br/>Washer</p> <p>15</p> <p>2. Fasten the mounting plate to the L bracket using M5 x 12 (x4) machine screws and the washers. The adjustable range is 15 mm.</p> | <p><b>3</b></p>  <p>Anti-tamper nuts<br/>M6x40 Machine screws</p> <p>3. Attach the magnet to the mounting plate. Place anti-tamper nuts (x4) on the L bracket and fasten using M6 x 40 machine screws (x4).</p> |
| <p><b>4</b></p>  <p>M3x5 Machine screws</p> <p>4. Slide the side cover plates on both sides of the L bracket and secure with M3x5 machine screws (x2)</p> | <p><b>5</b></p>  <p>5. Installation complete</p>  |   |